

### Reset module



Mounted in the bottom flange when wanting to reset without dismounting the cap.  
Used for VariMax and MiniMax.

F29320101      Reset module